

FIG. 1

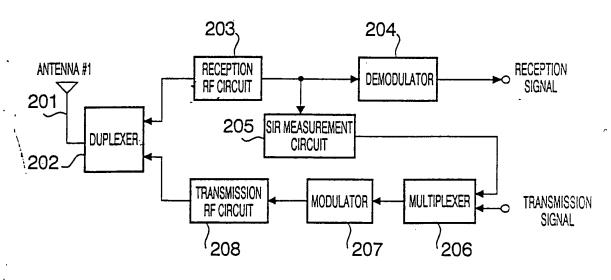


FIG. 2

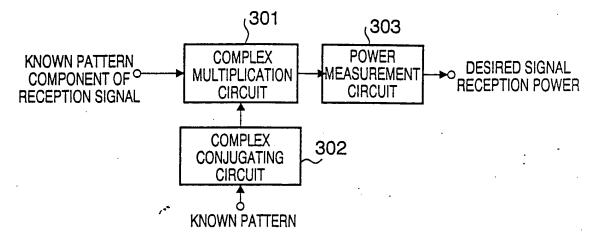


FIG. 3

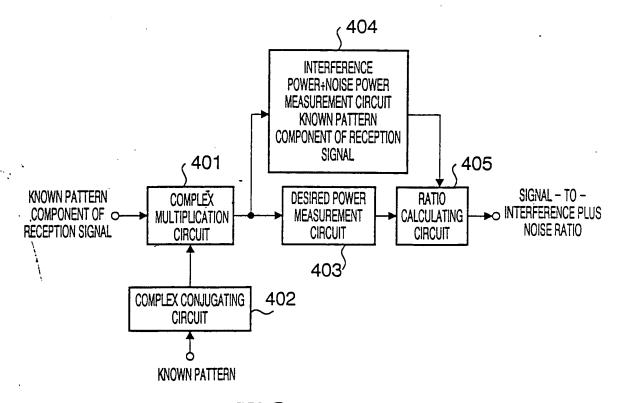


FIG. 4

FIG. 5

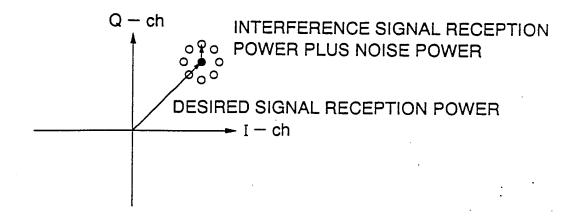


FIG. 6

PILOT	MESSAGE	CONTROL INFORMATION
-------	---------	------------------------

FIG. 7


PILOT SYMBOL	FLAG	MESSAGE
-----------------	------	---------

(a) WHEN FLAG = MESSAGE


	PILOT SYMBOL	FLAG	CONTROL INFORMATION
--	-----------------	------	---------------------

(b) WHEN FLAG = CONTROL INFORMATION


FIG. 8

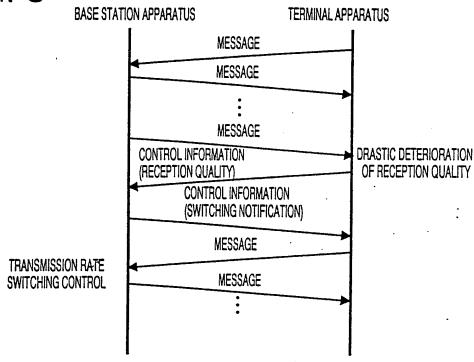

WHEN TERMINAL APPARATUS STARTS TO REPORT UPON RECEPTION OF RECEPTION QUALITY MEASUREMENT RESULT

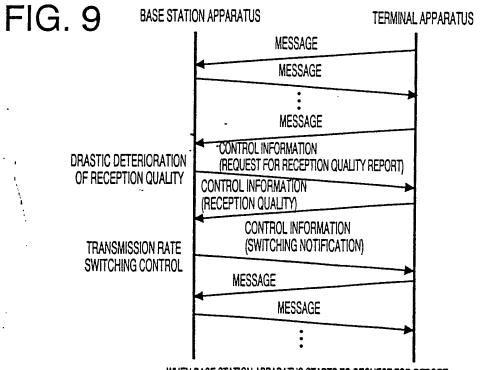


WHEN BASE STATION APPARATUS STARTS TO REQUEST FOR REPORT ON RECEPTION QUALITY TO TERMINAL UPON RECEPTION OF RECEPTION QUALITY MEASUREMENT RESULT

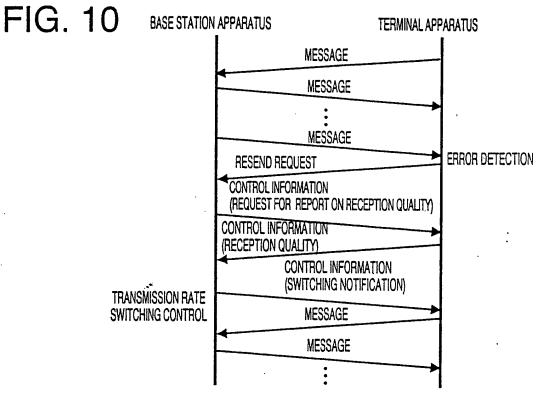

WHEN BASE STATION APPARATUS STARTS TO REQUEST FOR REPORT ON RECEPTION QUALITY TO TERMINAL UPON RECEPTION OF RESEND REQUEST FROM TERMINAL

FIG. 11

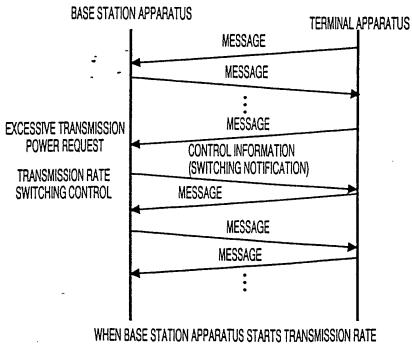

WHEN BASE STATION APPARATUS STARTS TRANSMISSION RATE
SWITCHING CONTROL BASED ON OWN TRANSMISSION POWER

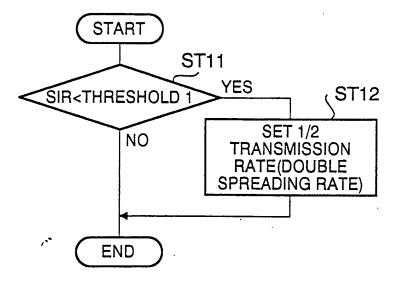


FIG. 12

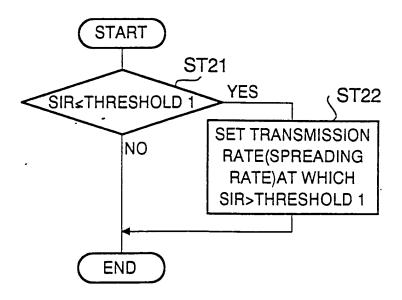


FIG. 13

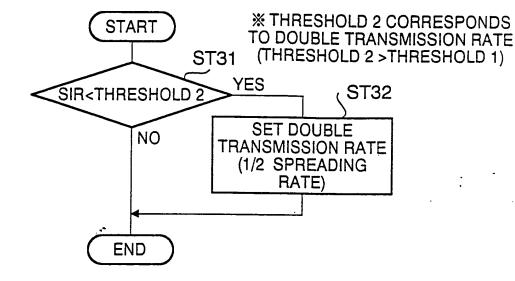


FIG. 14

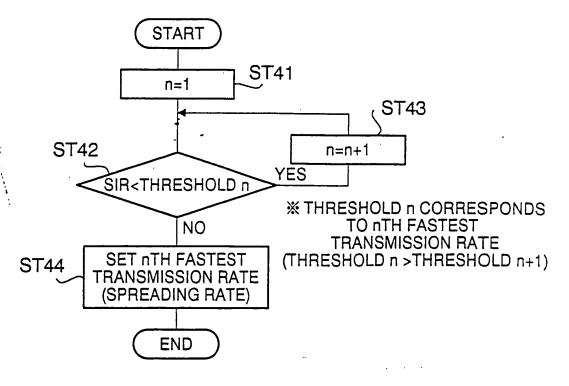


FIG. 15

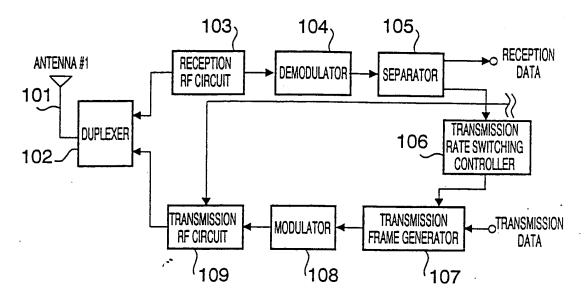


FIG. 16

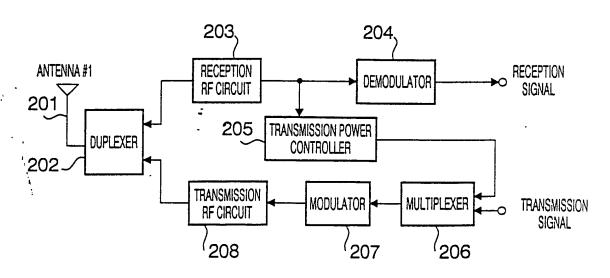


FIG. 17

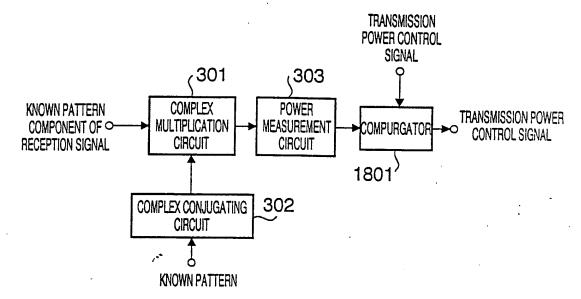


FIG. 18


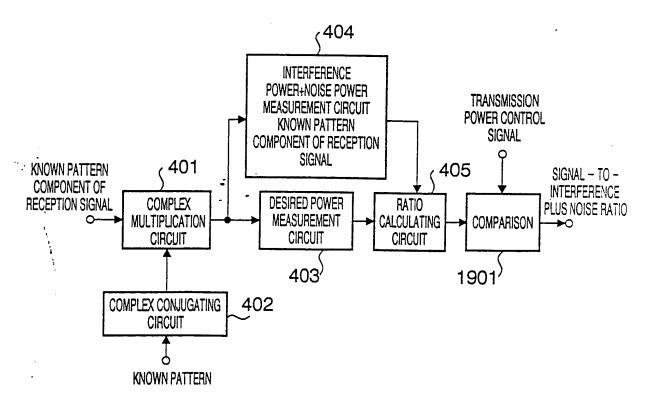


FIG. 19

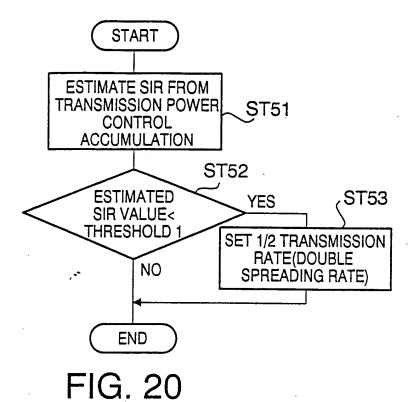

START

ESTIMATE SIR FROM

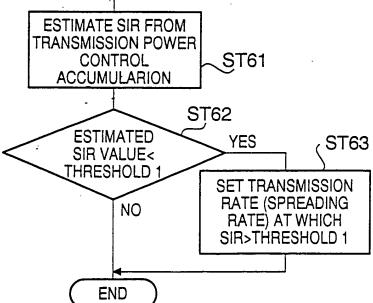
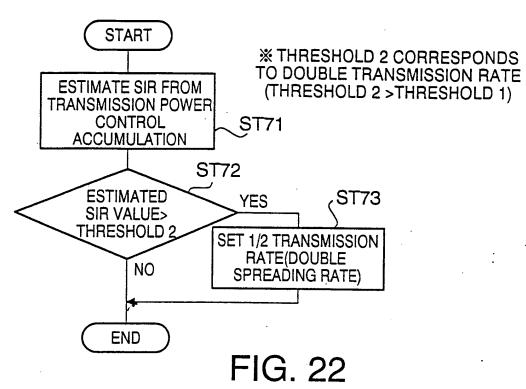
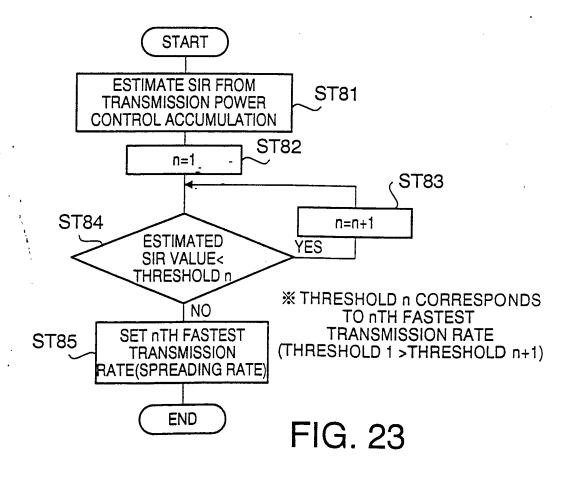


FIG. 21





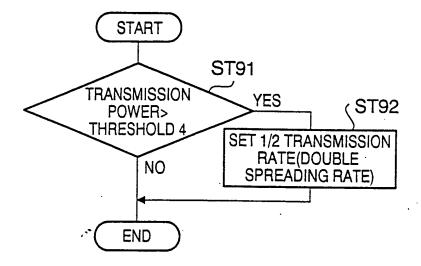


FIG. 24

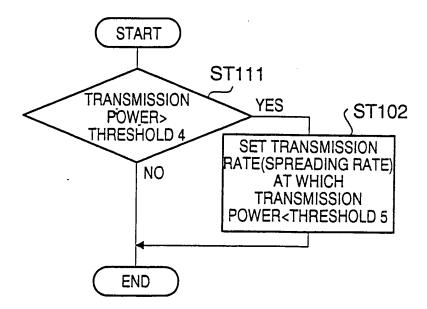


FIG. 25

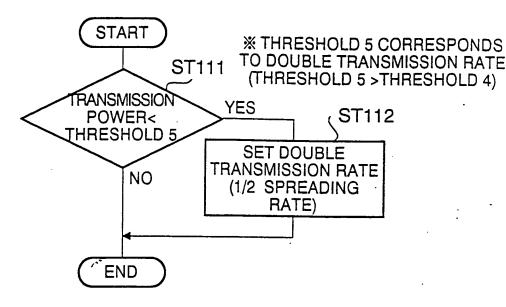


FIG. 26

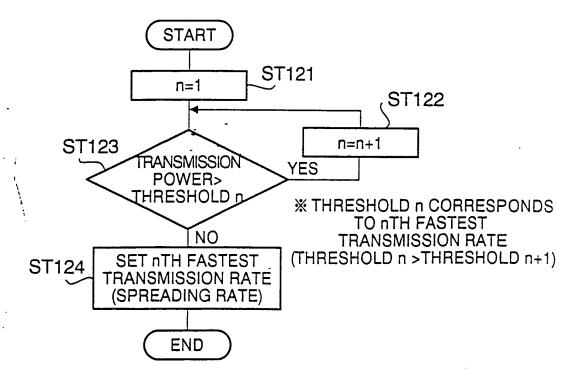


FIG. 27

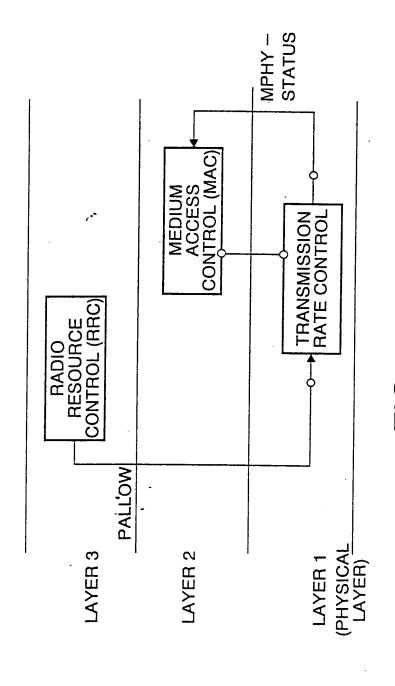


FIG. 28

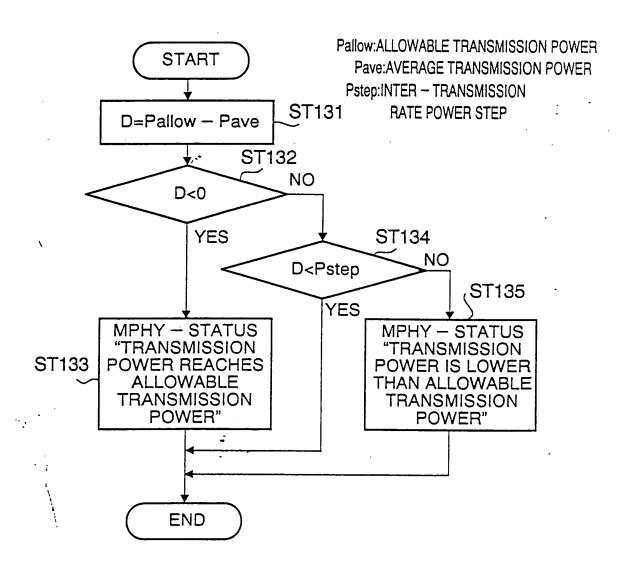


FIG. 29